



Instructions for use of the Nikko Stirling

Reflex One Sight



The Nikko Stirling Reflex One Sight has been designed to assist shooters requiring a sight that allows fast and accurate target sighting and shooting. The Weaver base design allows for easy mounting to any firearm that you can fix a Weaver or Picatinny rail. Please consult your gunsmith or firearms dealer for advice about the suitability of this sight to your requirements.

Mounting

The Reflex One sight comes with integral Weaver Mounts, which will utilise a Weaver rail or a Picatinny rail design for the mounting of the sights. The mount fits between the sight and the firearm providing a solid base that prevents movement causing inaccuracy. In both cases please ensure the base is correctly aligned with the rails. Then

simply attach the sight using the two allen head screws.

Battery insertion and changing.

Each Reflex sight is supplied with a CR2032 battery for use. These batteries are commonly available from camera and electrical retailers. The battery is housed in the electronics switch located on the left side of the sight. Remove the cover by inserting a small coin into the slot provided, turn in an anticlockwise direction.. Battery changing can be done at any time and it is recommended that the battery is changed prior to failure. The Battery is inserted with the positive sign up. It is recommended that the battery be removed if you are storing the sight.

Adjustment of the sight.

Adjustment of your Reflex Sight should only be made at an approved range. First using a firm rest fire two or three shots to provide a group. Then measure the adjustment you need to make to bring the group to the centre of your target.

1. **Elevation (E) and Windage (W) adjustment** – Remove the waterproof covers of the windage and elevation adjustments. Make the necessary adjustment to both the windage and the elevation dials to move the point of impact to the dots centre. The adjustments are marked in increments of 1/4 MOA. This approximates to 1/4inch at 100 yards (0.7cm at 100m). If you are adjusting a pistol sighted at 20 yards then you need to adjust the scale accordingly. At 20 yards each adjustment mark is 1/20 of an inch.
2. Once you have made the require adjustment. Replace the covers before firing and at an approved range fire another group of three shots. Should further adjustments be required then repeat these steps.

Brightness adjustment

The Reflex One sight features a red dot that can be adjusted through a range of settings. This allows you to adjust the

brightness to the light level that you are hunting in.

Warranty

When used under normal sporting conditions, The Reflex One sight comes with a 12 month warranty, unless varied by local laws. (batteries excluded) Should you require service please contact the retailer who you bought the sight from to arrange return to our distributor in your country.

www.nikkostirling.com

